



YLI ELECTRONIC


Waterproof Magnetic Lock



Specification

Model	Size(unit:mm)	Voltage	Current	Holding Force	Signal Output	Door
YM-350W	228Lx49Wx29H	12VDC (24VDCneed order)	12V/480mA 24V/240mA	350kg(800Lbs)	No	Single Door
YM-350W-S	228Lx49Wx29H	12VDC (24VDCneed order)	12V/480mA 24V/240mA	350kg(800Lbs)	Yes	Single Door
YM-500W	220Lx63Wx36H	12/24VDC	12V/420mA 24V/210mA	500kg(1200Lbs)	No	Single Door
YM-500W-S	220Lx63Wx36H	12/24VDC	12V/420mA 24V/210mA	500kg(1200Lbs)	Yes	Single Door

Diagram (unit:mm)


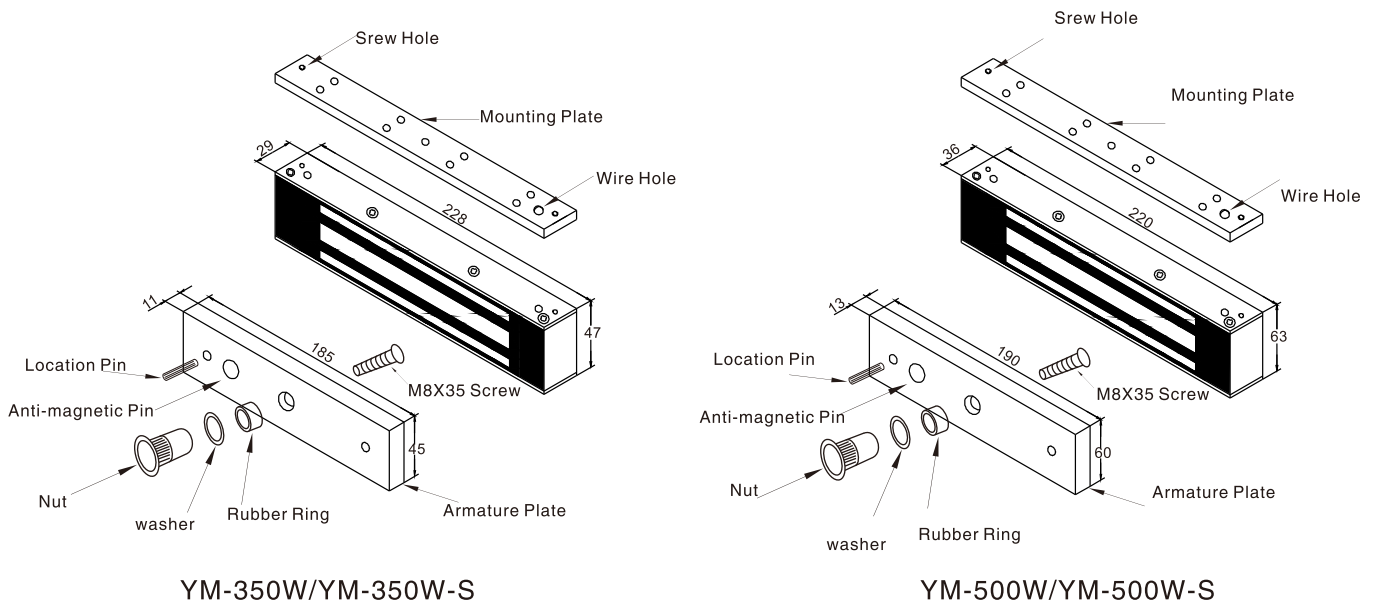


⚠ Cautions:


- The screw of the armature plate should not be fixed too tight. Proper elasticity should be guaranteed for the rubber ring so that the armature plate can adjust itself to the appropriate position.
- Check the jumper's position before connecting. Figure out it represents 12VDC or 24VDC.

We create security


Installation

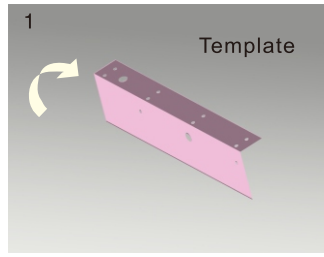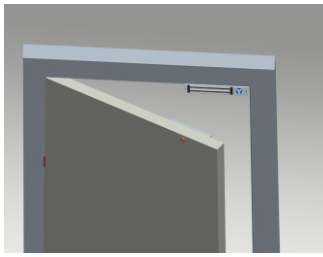


1 Fold the plate to 90° .

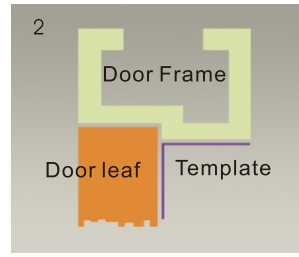


2 Close the door first, then place the upper side of template on door frame, while adjust the left side next to the door leaf.

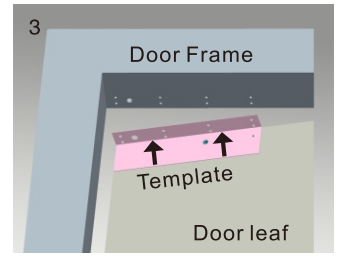


3 Mark screw positions of armature plate and magnetic lock on door leaf and door frame respectively.

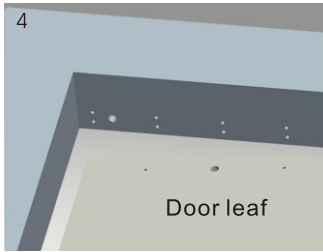


4 Drill holes based on the marked positions.

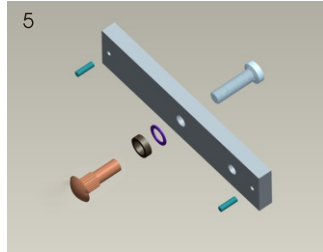


5 Make a combination based on the picture.

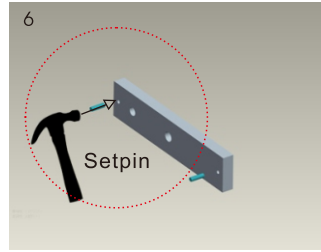


6 Strike the pin into the armature plate slightly (to avoid movement).

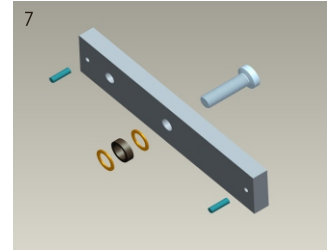


7 Make a combination based on the picture (add washer accordingly). The rubber ring must be added.

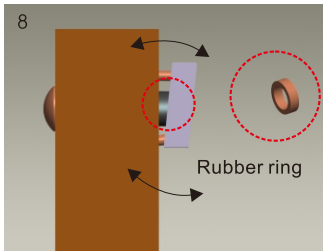


8 Place the rubber ring between armature plate and door leaf.

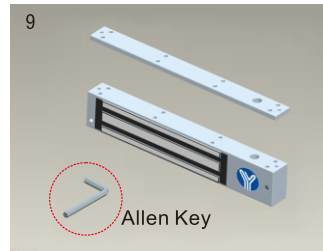


9 Use Allen key to remove the mounting plate from lock body.

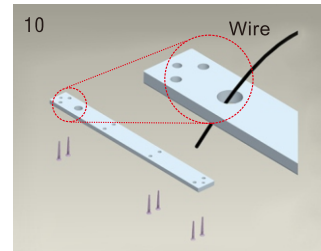


10 Fix the mounting plate on the door frame according to the holes drilled earlier.

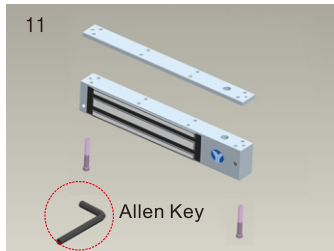


11 Use Allen key to screw the lock body on the mounting plate.

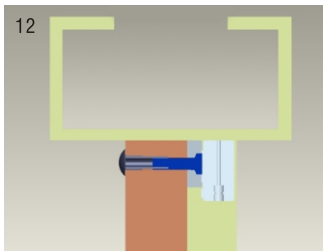

12 Close the door to test holding force. The angle between armature plate and magnetic lock can be adjusted by adding or reducing washers.

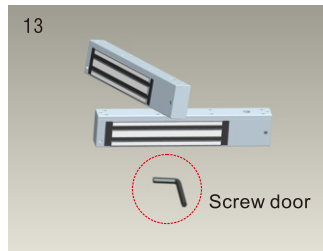


13 After all the appropriate procedures, the holding force can be maximized. Finally, fix the tamper screw.

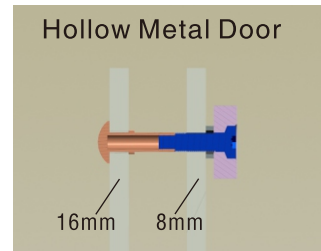


Hollow Metal Door

Drill a hole
Inside: Diameter is 8mm
Outside: Diameter is 16mm

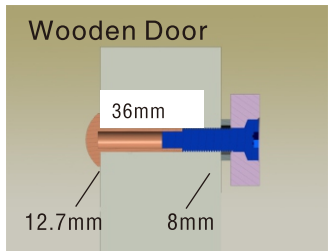

Wooden Door

Drill a hole
Inside: Diameter is 8mm
Outside: Diameter is 12.7mm

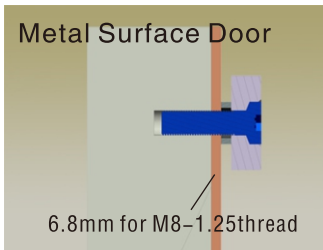

Metal Surface Door

6.8mm for M8-1.25thread

Inside: Drill a hole diameter is 8mm folding the plastic straight pin

Notice:

Thickness of Door Leaf:

350LBS: 44mm

600LBS: 50mm

800LBS: 48mm

1200LBS: 46mm


We create security

Bracket Installation

Different brackets are available according to different types of doors. For example, narrow door, frameless glass door and inward opening door.



L Bracket-For outward opening door

When the door frame thickness is less than 42mm, L bracket is needed.

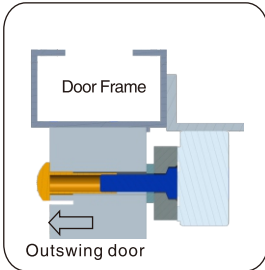



ZL Bracket-For inward opening door

For inward opening door, ZL bracket is needed.

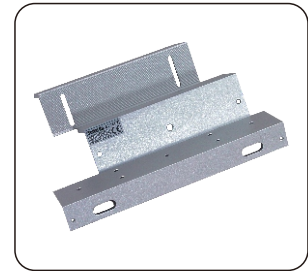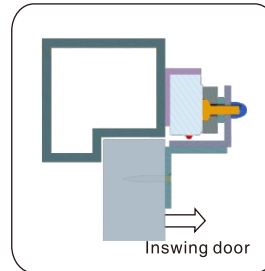


U Bracket

For the frameless glass door. U bracket is needed.

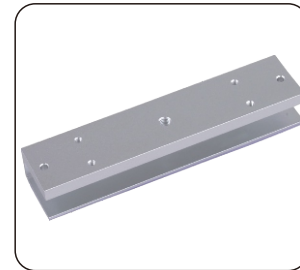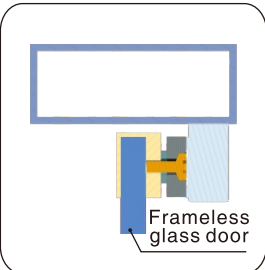


I Bracket for armature plate


When the door frame is too thick, I bracket is needed.

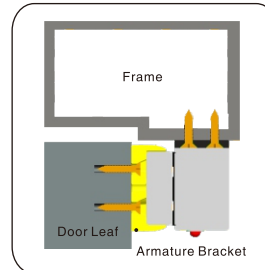


Installation Instruction

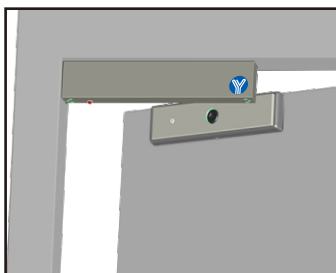


Demonstration of I Bracket Installation

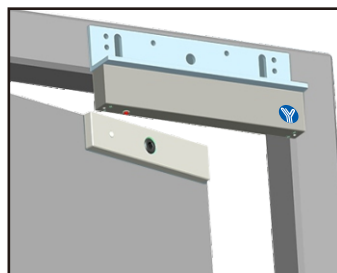

Demonstration of L Bracket Installation

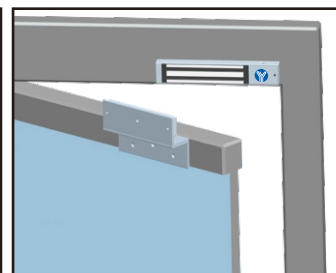

Demonstration of ZL Bracket Installation

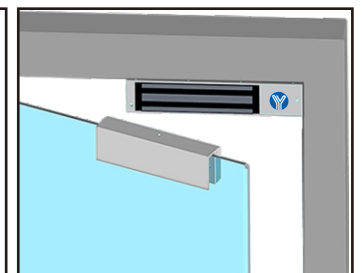


Demonstration of U Bracket Installation

We create security


Circuit Board Diagram

YM-350W/YM-500W

A. 12V DC Input

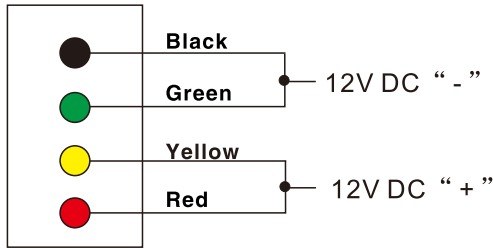


B. 24V DC Input

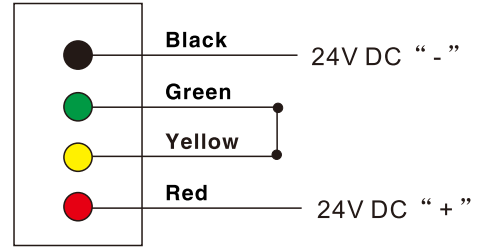


YM-350W-S/YM-500W-S


A. 12V DC Input

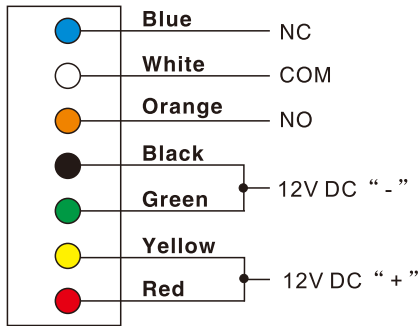

B. 24V DC Input

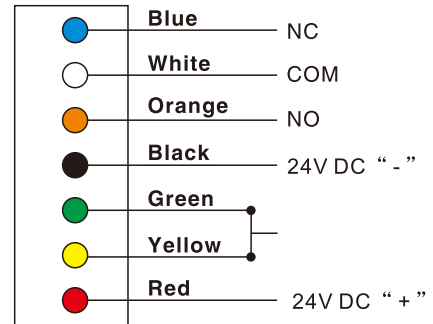

Wire Connection

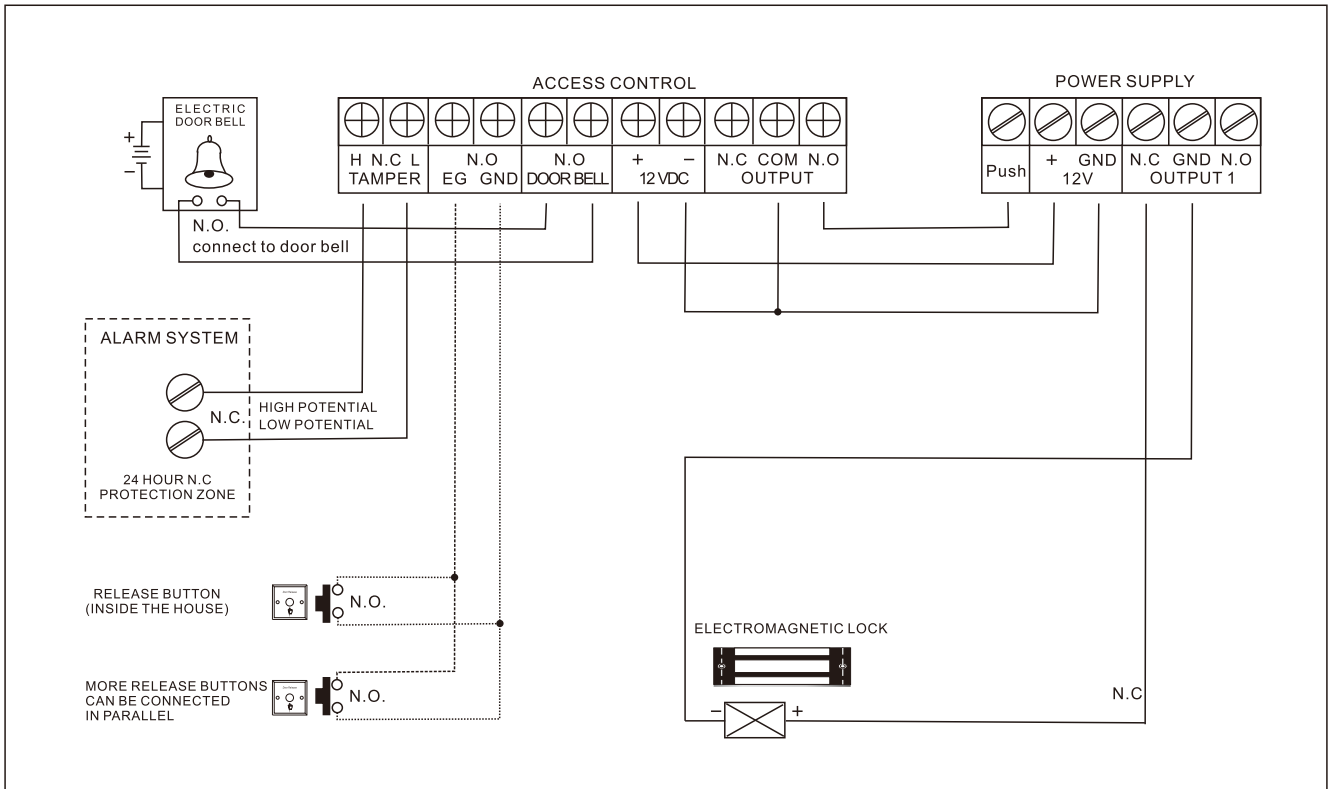

We create security